


NEF6Li Parts Diagram

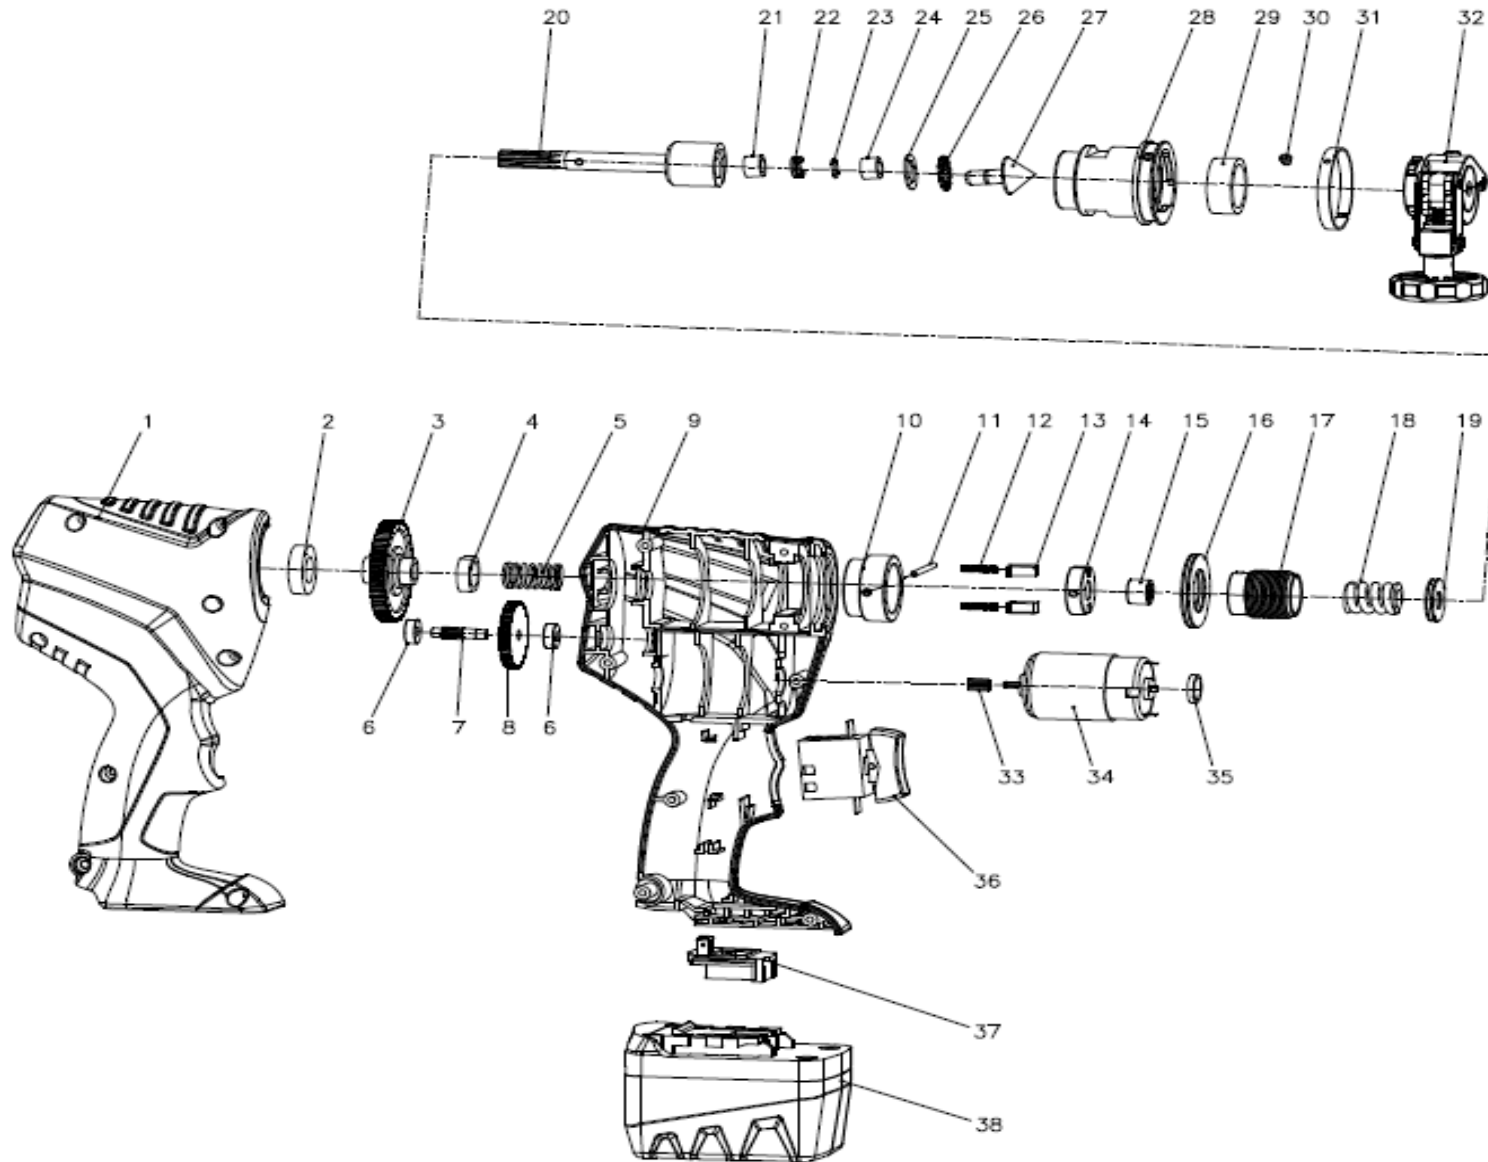

Ref #	Part no.	Description
1	EF00001	Right Casing
2	EF00002	Ball Bearing
3	EF00003	Gear
4	EF00004	Oil-retaining Bearing
5	EF00005	Auxiliary Spring
6	EF00006	First order reduction module
9	EF00009	Left Casing
10	EF00010	Expanding Shaft Assembly
25	EF00025	Washer
26	EF00026	Thrust Needle Roller Bearing
27	EF00027	Flare Cone
28	EF00028	Flare Body Assy
30	EF00030	Locating Pin
31	EF00031	Elastic Ring
32	EF00032	Expander body asm
33	EF00033	Motor Assy
36	EF00036	Switch
37	EF00037	Power Supply Connection
38	EF00038	Battery Asm
Not Shown	EF00041	Charger
Not Shown	EF00042-1	1/2" Core
Not Shown	EF00042-2	3/8" Core
Not Shown	EF00042-3	5/16" Core
Not Shown	EF00042-4	5/8" Core
Not Shown	EF00042-5	3/4" Core
Not Shown	EF00042-6	1/4" Core