


NTE11L Parts Diagram

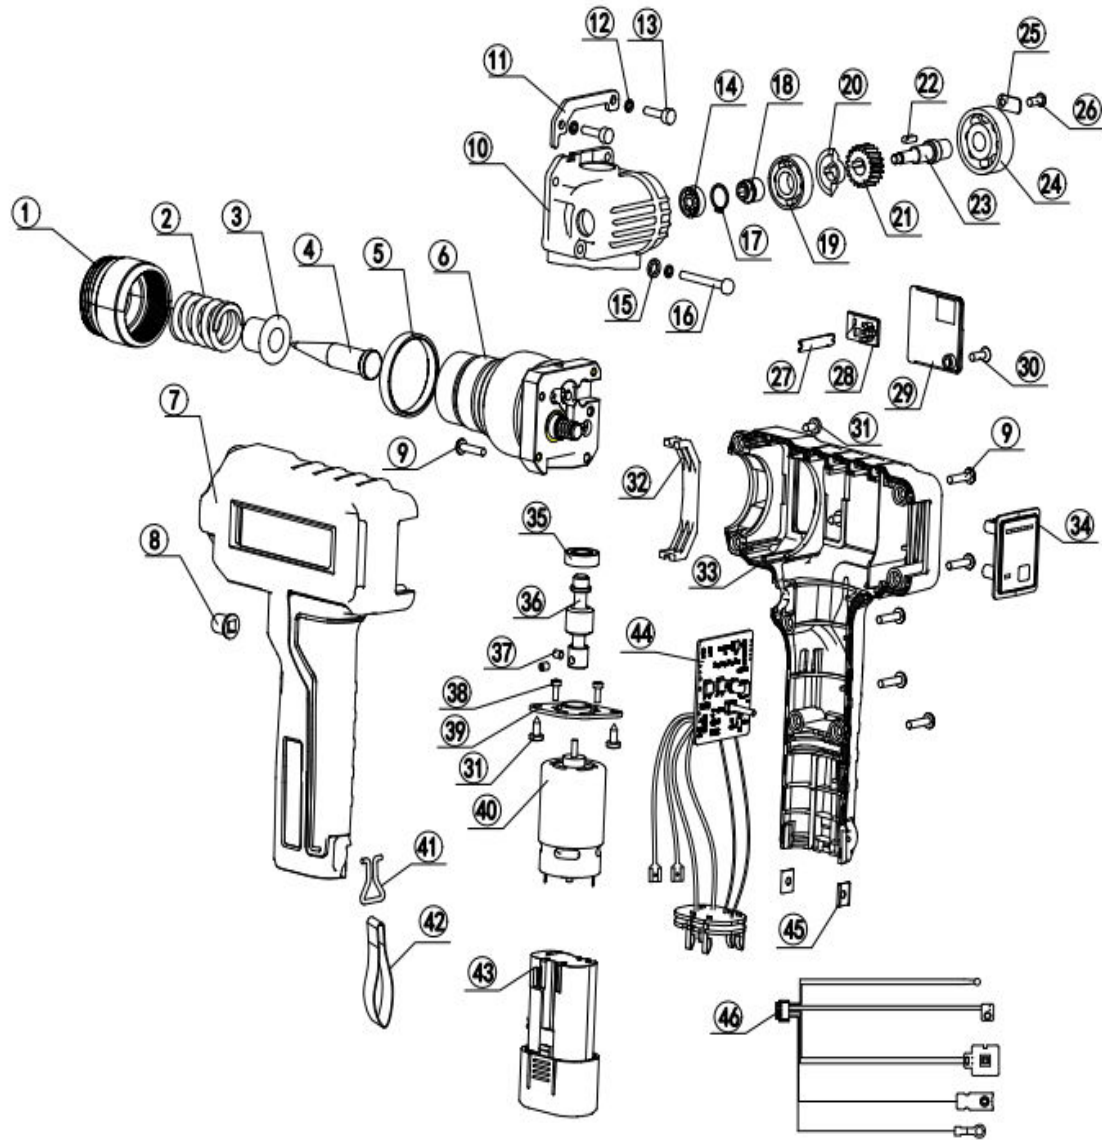

48-54



55



Ref No.	Part No.	Description
1	PEH11001	Connect head
2	PEH11002	Reset Spring
3	PEH11003	Spring seat
4	PEH11004	Cone
5	PEH11005	Plastic Ring
6	PEH11006	Pump body assembly
7	PEH11007	Left shell
8	PEH11008	Start switch cap
9	PEH11009	Bolt
10	PEH11010	Gearbox
11	PEH11011	Pressing plate
12	PEH11012	Elastic washer
13	PEH11013	Bolt
14	PEH11014	Ball bearing
15	PEH11015	Flat gasket
16	PEH11016	Bolt
17	PEH11017	External Circlips
18	PEH11018	Eccentric wheel
19	PEH11019	Ball bearing
20	PEH11020	Balancing Block
21	PEH11021	Worm gear
22	PEH11022	Flat key
23	PEH11023	transmission shaft
24	PEH11024	Ball bearing
25	PEH11025	Bearing baffle
26	PEH11026	Bolt
27	PEH11027	Shifting fork
28	PEH11028	Push button
29	PEH11029	Cover plate
30	PEH11030	Bolt
31	PEH11031	Bolt
32	PEH11032	Exhaust pressure plate
33	PEH11033	Right shell
34	PEH11034	Display panel
35	PEH11035	Ball bearing
36	PEH11036	Endless screw
37	PEH11037	screw
38	PEH11038	Bolt
39	PEH11039	Motor fixing plate
40	PEH11040	Motor
41	PEH11041	Ring
42	PEH11042	Hand rope
44	PEH11044	Controller assembly
45	PEH11045	Fixing plate
46	PEH11046	Harness components

Ref No.	Part No.	Description
47	PEH11047	blow case
48	PEH11048	1" fitting
49	PEH11049	1 1/8" fitting
50	PEH11050	7/8" fitting
51	PEH11051	3/4" fitting
52	PEH11052	1/2" fitting
53	PEH11053	3/8" fitting
54	PEH11054	5/8" fitting
55	PNEF41	Charger
43	PNEF23	Battery Pack