


NTB7L

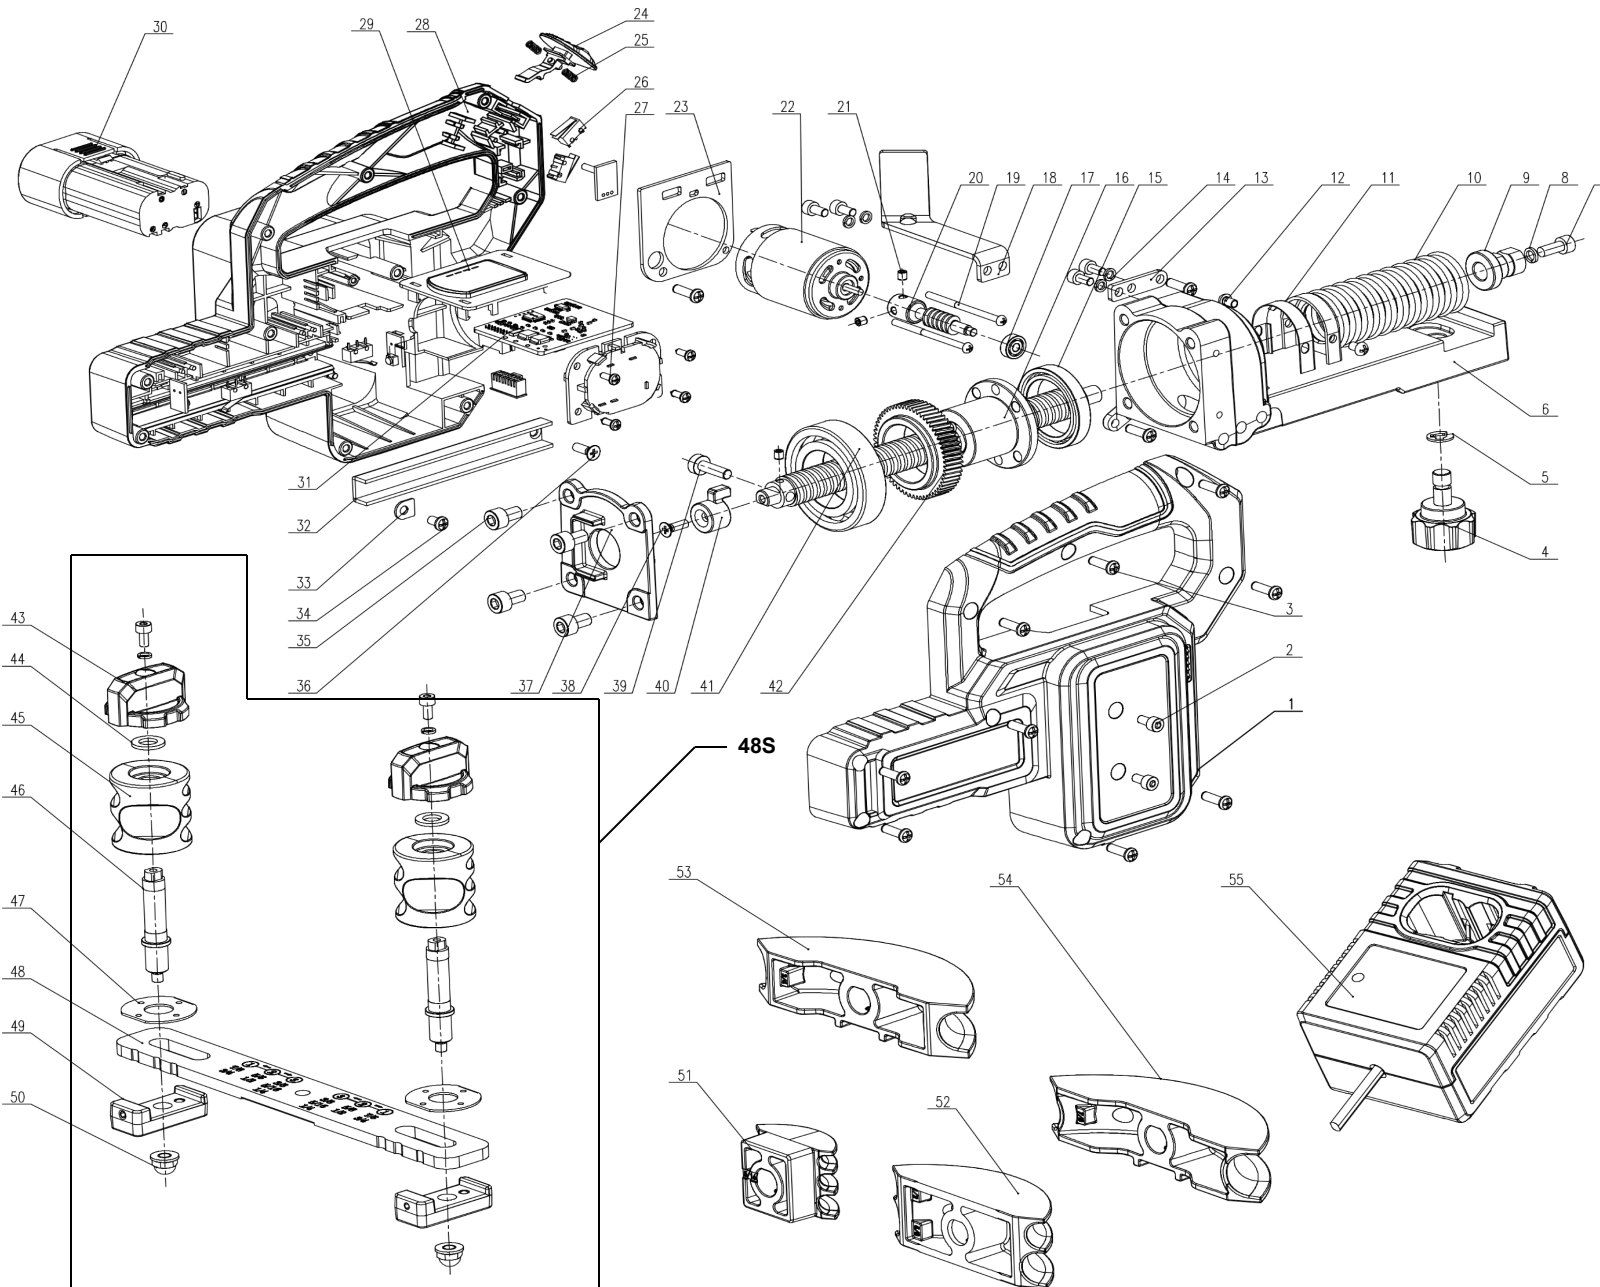

Ref. No.	Part No.	Description
1	NTB001	Left shell assembly
2	NTB002	Hexagon socket cap screws
3	NTB003	Cross Recessed Pan Head Tapping screws
4	NTB004	Locking screw assembly
5	NTB005	Split washer
6	NTB006	Gear box
7	NTB007	Hexagon socket cap screws
8	NTB008	Spring washer
9	NTB009	Mandrel connector
10	NTB010	Protective sleeve
11	NTB011	Protective sleeve buckle
12	NTB012	Cross Recessed Disc Head Screws
13	NTB013	Junction plate
14	NTB014	Spring washer
15	NTB015	Bearing
16	NTB016	Ball screw assembly
17	NTB017	Bearing
18	NTB018	Pipe release baffle
19	NTB019	Cross Recessed Pan Head Tapping screws
20	NTB020	Worm gear
21	NTB021	Hexagon concave end setting screw
22	NTB022	Motor
23	NTB023	Motor air duct bulkhead
24	NTB024	Switch push button
25	NTB025	Push button spring
26	NTB026	16P wiring harness
27	NTB027	Cross Recessed Pan Head Tapping screws
28	NTB028	Right shell assembly
29	NTB029	display panel
30	NBF2	Battery
31	NTB031	Controller PCB
32	NTB032	Chute
33	NTB033	Pressing plate
34	NTB034	Cross Recessed Pan Head Tapping screws
35	NTB035	Hexagon socket head screw
36	NTB036	Cross Recessed countersunk head tapping screws
37	NTB037	Gearbox end cover
38	NTB038	Cross Recessed Countersunk Head Screws
39	NTB039	Pin assembly
40	NTB040	Limit switch press plate

Ref. No.	Part No.	Description
41	NTB041	Bearing
42	NTB042	worm gear
43	NTB043	Knob
44	NTB044	Flat gasket 8
45	NTB045	Sizing Selector
46	NTB046	Rotating wheel shaft
47	NTB047	Positioning plate
48	NTB048	Crossbar
48S	NTB048S	Crossbar Assembly
49	NTB049	Lock nut assembly
50	NTB050	Hexagon flange cover nuts M6
51	NTB051	3 in 1 Mandrel
52	NTB052	2 in 1 Mandrel
53	NTB053	3/4 Mandrel
54	NTB054	7/8 Mandrel
55	PNEF41	Charger