


NP5DP Parts Diagram

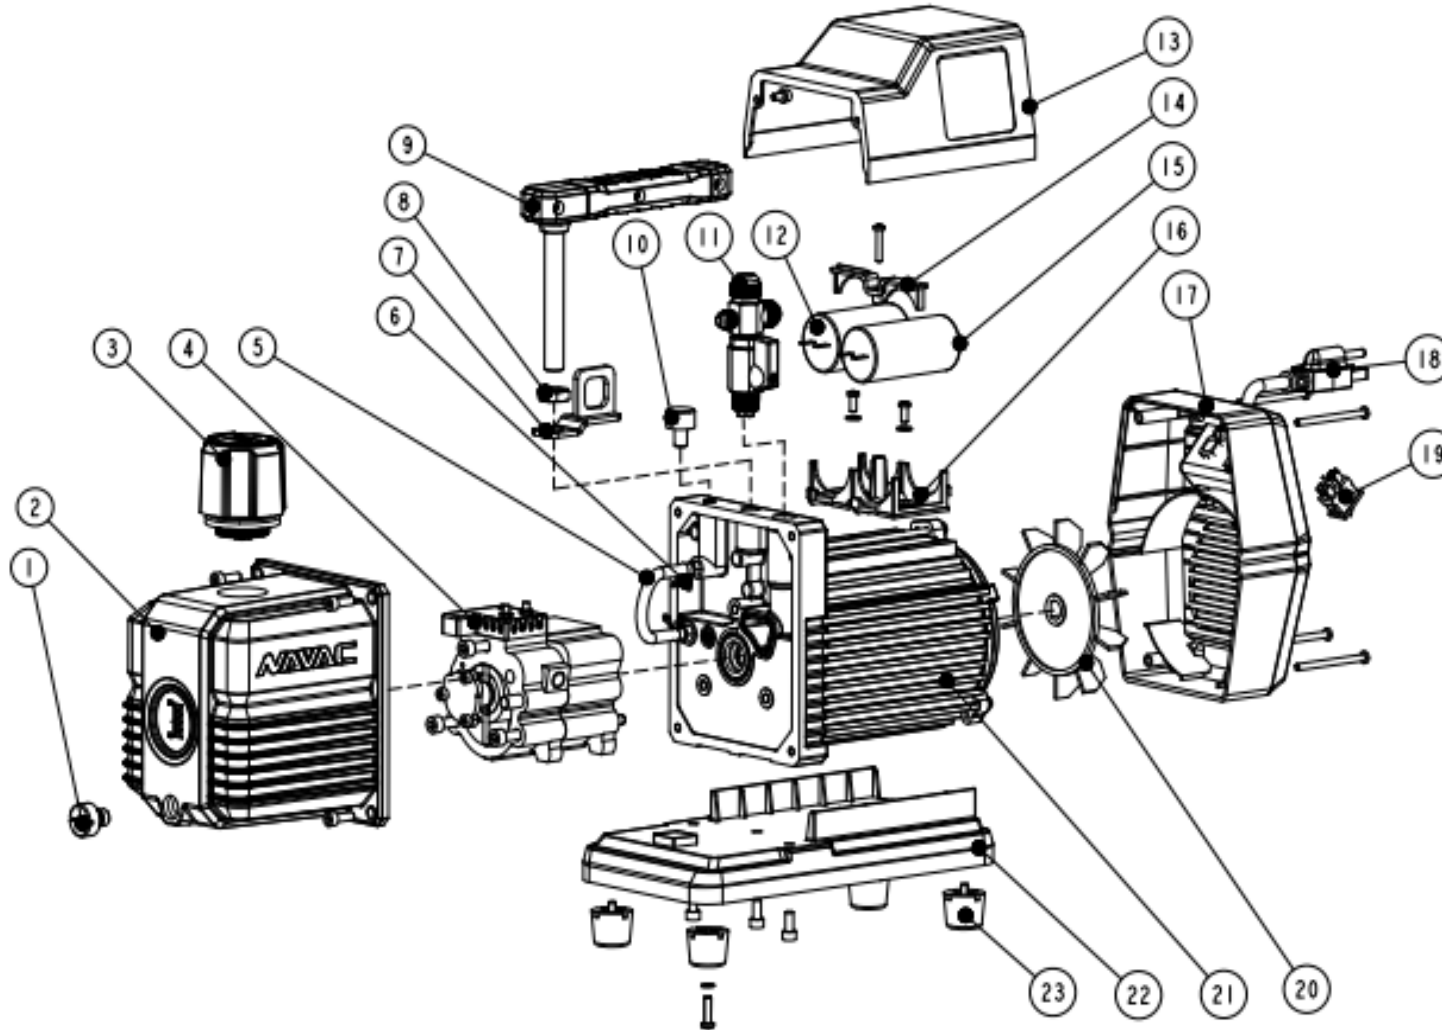

Ref No.	Part No.	Description
1	P040001	Oil Drain
2	P040002	Oil Housing
3	P040003	Exhaust Filter and Noise Reducer
4	P040004	Not Available Please order Pump Rebuild Kit
5	P040005	Rubber Tube
6	P040006	Jump Ring
7	P040007	Hook
8	P040008	Nut
9	P040009	Handle
10	P040010	Gas Ballast
11	P040011	Inlet Port
12	P040012	Running Capatitor
13	P040013	Top cover
14	P040014	Plate
15	P040015	Start Capatitor
16	P040016	Pedestal
17	P040017	Rear cover
18	P040018	Power Cord
19	P040019	Switch
20	P040020	Fan
21	P040021	Motor (Not Available)
22	P040022	Plate
23	P040023	Rubber Feet
Not Shown	NKR-4DP	Pump Rebuild Kit
Not shown	P040002-1	Oil Sump Gasket