


NRP6DV Parts Diagram

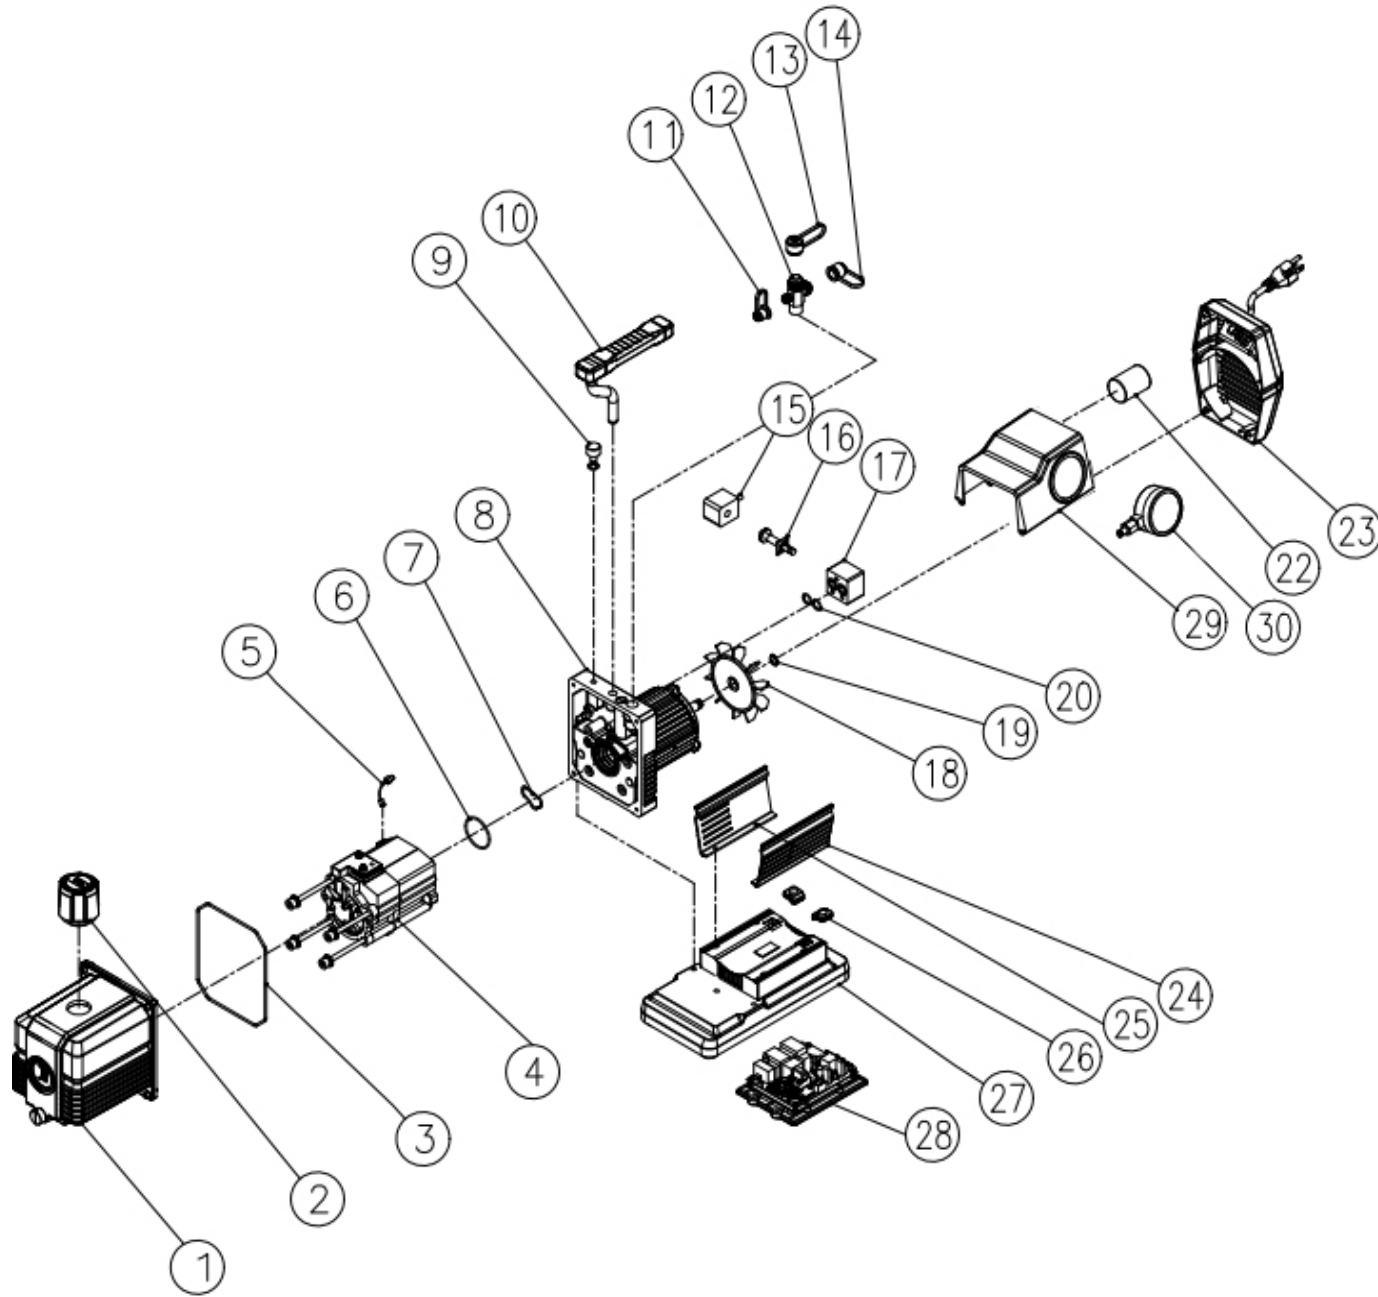

Ref No.	Part No.	Description
1	RP18001	Oil Sump
2	RP18002	Exhaust Filter
3	RP18003	O-ring (Oil Sump)
4	RP18004	Not Available please order Pump Rebuild Kit below
5	RP18005	Gas Ballast Assy
6	RP18006	O-ring
7	RP18007	O-ring
8	RP18008	Motor Assy (Not Available)
9	RP18009	Gas Ballast Knob
10	RP18010	Handle
11	RP18011	1/4" Inlet Cap
12	RP18012	Inlet Port
13	RP18013	3/8" Inlet Cap
14	RP18014	1/2" Inlet Cap
15	RP18015	Solenoid Valve Winding
16	RP18016	Iron Core Assy
17	RP18017	Solenoid Valve Body
18	RP18018	Fan Blade
19	RP18019	Elastic Collar
20	RP18020	O-ring
22	RP18022	Capacitor
23	RP18023	Back Cover w/Power Cord
24	RP18024	Side Guard I
25	RP18025	Side Guard II
26	RP18026	Sheath
27	RP18027	Base Plate
28	RP16028	Controller Assy PCB
29	RP08029	Top Cover
30	RP08030	Analogue Gauge
Not Shown	RP18048	Oil Seal in Trestle
Not Shown	RP18011-2	O-Ring 1/4" Inlet cap
Not Shown	RP18013-2	O-Ring 3/8" Inlet Cap
Not Shown	RP18014-2	O-Ring 1/2" Inlet cap
Not Shown	RP18023-4	Power Switch
Not Shown	RP18023-1	Back Cover
Not Shown	RC16038	Oil Drain Cap w/O-Ring
Not Shown	RP18023-3	Power Cord
Not Shown	NKR-8D	Pump Rebuild Kit