


NRP6Di Parts Diagram

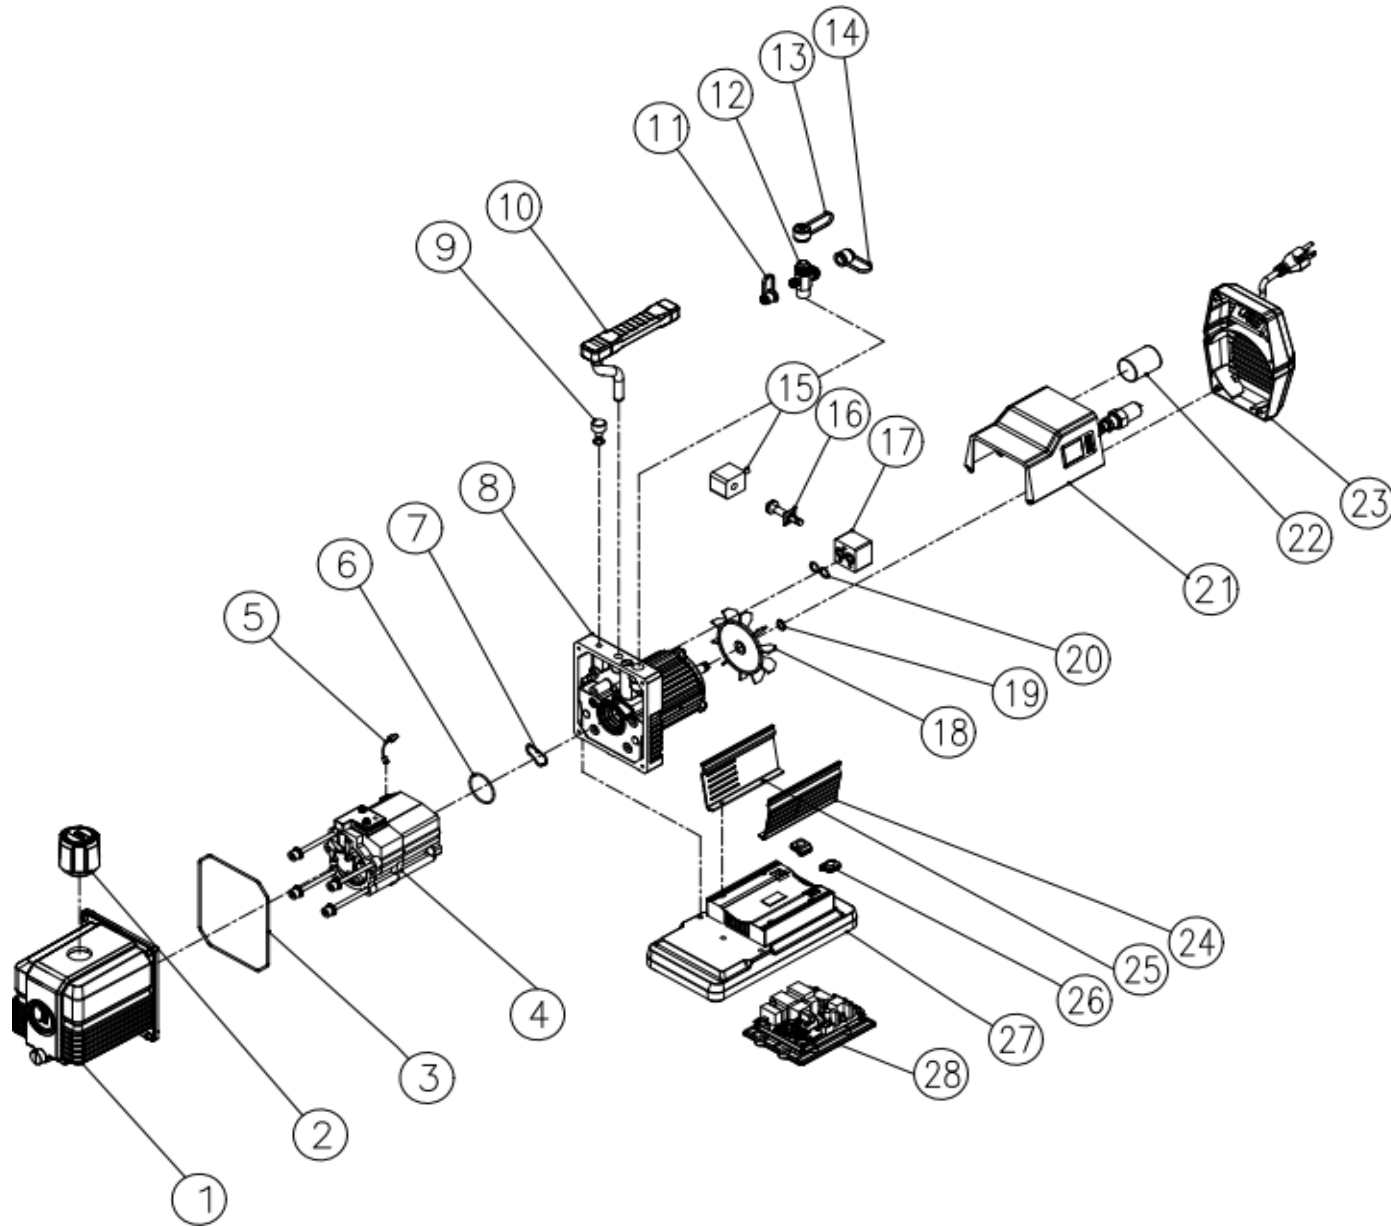

Ref No.	Part No.	Description
1	RP18001	Oil Sump
2	RP18002	Exhaust Filter
3	RP18003	O-ring (Oil Sump)
4	RP18004	Not Available please order Pump Rebuild Kit below
5	RP18005	Gas Ballast Assy
6	RP18006	O-ring
7	RP18007	O-ring
8	RP18008	Motor Assy (Not Available)
9	RP18009	Gas Ballast Knob
10	RP18010	Handle
11	RP18011	1/4" Inlet Cap
12	RP18012	Inlet Port
13	RP18013	3/8" Inlet Cap
14	RP18014	1/2" Inlet Cap
15	RP18015	Solenoid Valve Winding
16	RP18016	Iron Core Assy
17	RP18017	Solenoid Valve Body
18	RP18018	Fan Blade
19	RP18019	Elastic Collar
20	RP18020	O-ring
21	RP16021	Digital Display Controller with Micron Sensor Assy
22	RP18022	Capacitor
23	RP18023	Back Cover w/Power Cord
24	RP18024	Side Guard I
25	RP18025	Side Guard II
26	RP18026	Sheath
27	RP18027	Base Plate
28	RP16028	Controller Assy PCB
Not Shown	RP18048	Oil Seal in Trestle
Not Shown	RP18011-2	O-Ring 1/4" Inletcap
Not Shown	RP18013-2	O-Ring 3/8" InletCap
Not Shown	RP18014-2	O-Ring 1/2" Inletcap
Not Shown	RP18023-4	Power Switch
Not Shown	RP18023-1	Back Cover
Not Shown	RC16038	Oil Drain Cap w/O-Ring
Not Shown	RP18023-3	Power Cord
Not Shown	NKR-8D	Pump Rebuild Kit