


NTE11H2 Parts Diagram

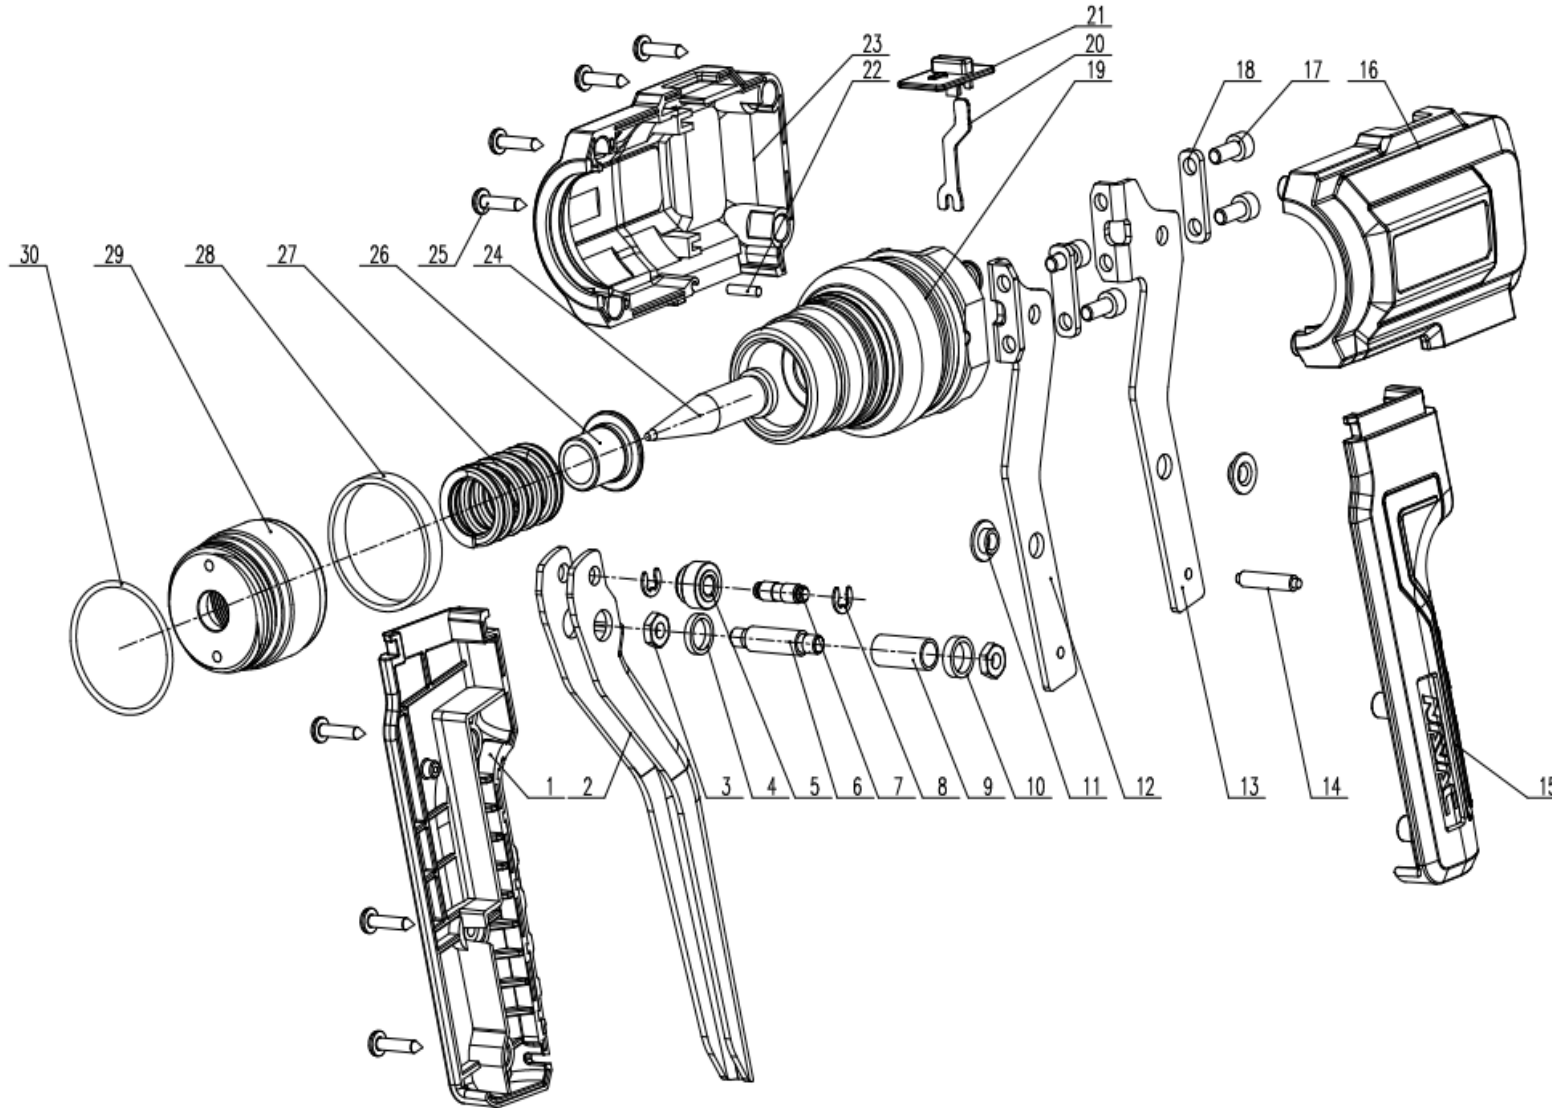

Ref No	Part No	Description
1	NTE11001	Lower right Shell
2	NTE11002	Handle
3	NTE11003	Hexagon thin nut
4	NTE11004	Gasket
5	NTE11005	Idler wheel
6	NTE11006	Double threaded pin
7	NTE11007	Axis pin
8	NTE11008	Split washer
9	NTE11009	Support pin sleeve
10	NTE11010	Limit pin sleeve
11	NTE11011	Rubber sleeve
12	NTE11012	Left support plate
13	NTE11013	Right support plate
14	NTE11014	Pin
15	NTE11015	Lower left shell
16	NTE11016	Upper left shell
17	NTE11017	Hexagon socket head cap Screw
18	NTE11018	Pressing plate
19	NTE11019	Pump body assembly
20	NTE11020	Decompression fork
21	NTE11021	Decompression button
22	NTE11022	Rubber strip
23	NTE11023	Upper right shell
24	NTE11024	Expanded tube cone shaft
25	NTE11025	Cross recessed pan head tapping screw
26	NTE11026	Spring seat
27	NTE11027	Reset spring
28	NTE11028	Plastic ring
29	NTE11029	Connect head
30	NTE11030	O ring
31	PEH11042	Hand rope
32	PEH11048	1" fitting
33	PEH11049	1 1/8" fitting
34	PEH11050	7/8"fitting
35	PEH11051	3/4"fitting
36	PEH11052	1/2"fitting
37	PEH11053	3/8"fitting
38	PEH11054	5/8"fitting